


4

Attach the two straps to each other.

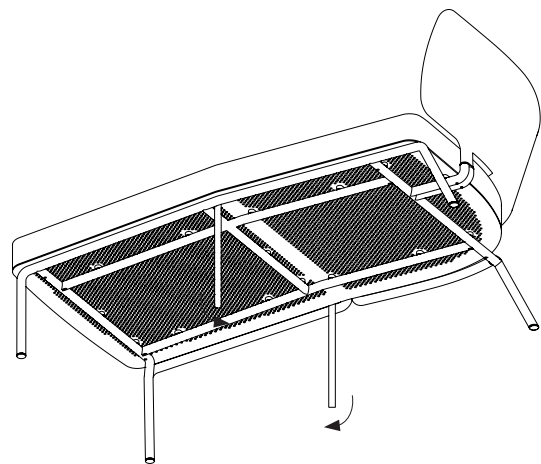

TADT01 - 09-04-2019

ASSEMBLY INSTRUCTIONS

CTR MERIDIENNE


01103-x-x 01104-x-x

Tribù nv
Oude Heidestraat 72
3740 Bilzen
BELGIUM


www.tribu.com
info@tribu.com

TRIBÙ
The art of leisure


CONTENT

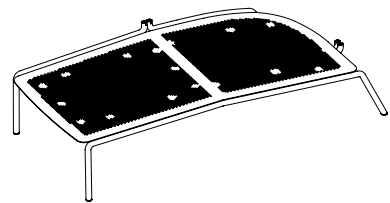

1 x
Seat frame

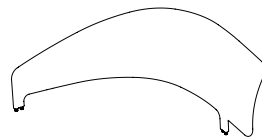


1 x
Backrest




4 x
Headless screw

ASSEMBLY INSTRUCTIONS


1 Open the box and unpack the BACKREST and the SEAT FRAME. Insert the BACKREST into the SEAT FRAME

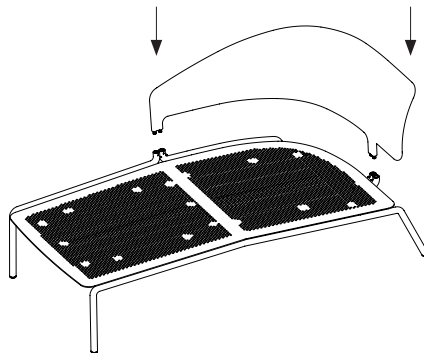

2 Use an allen key and 4x HEADLESS SCREWS to secure the BACKREST to the SEAT FRAME. Push the BACKREST down while tightening the HEADLESS SCREWS.

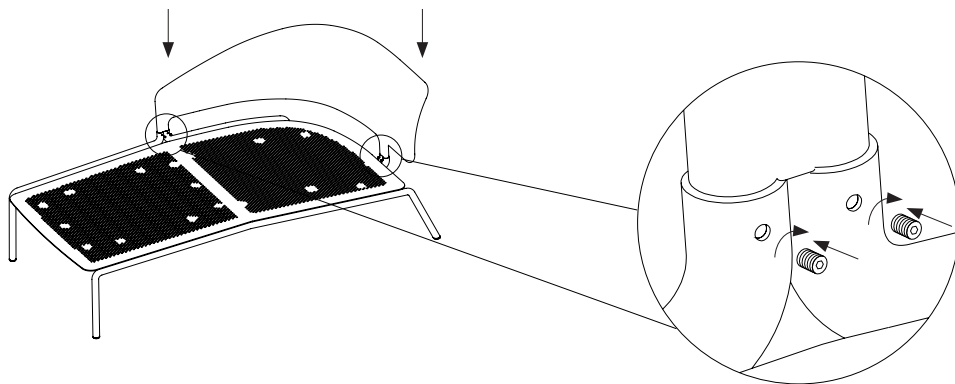

3 To attach the cushion, insert the 2 straps between the frame and the seat plate.

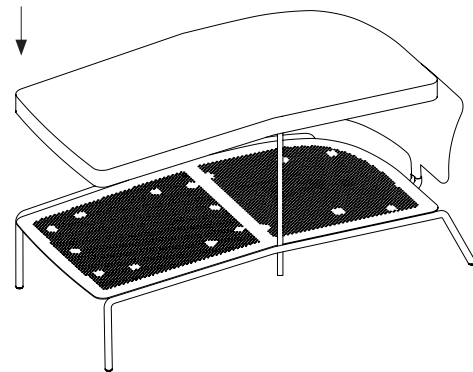

3 Wrap the cushion around the seat plate. Wrap the side without armrest first (1), then the side with armrest (2). Pull the straps to ensure the cushion is wrapped entirely around the seat plate (3).

