
Assembly instructions
MOOD barchair
06216

Tribù nv Langendijkstraat 5a 3690 Zutendaal BELGIUM

> www.tribu.com info@tribu.com



Content

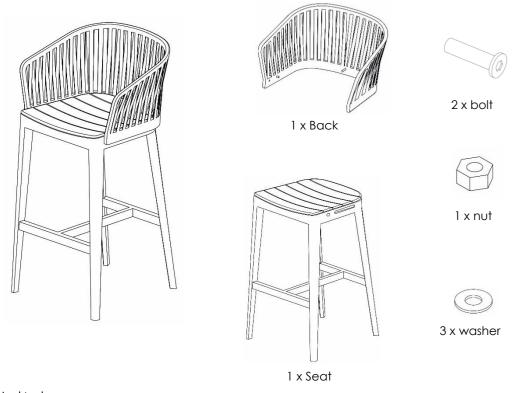


Required tools:




Assembly Instructions

Slide the Back part onto the seat part. The Back part has 2 guiding pins (A) that fit into a designated slot in the Seat part. The Back part also has a threaded pin (B) that fits into a hole in the Seat part. Push the Back part firmly against the Seat part.

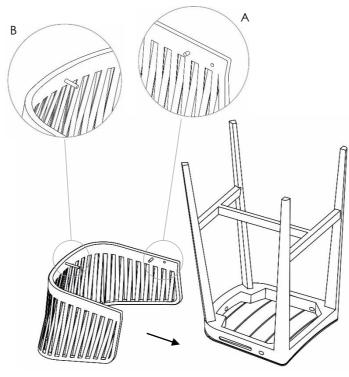

Attach the Back part to the seat part using 1 x washer, 1 x nut and an adjustable spanner.

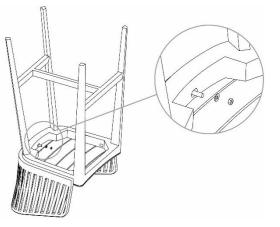

3 Use 2 x screw, 2 x washer and an Allen key to connect the Back part to the Seat part on the front side of the chair.

