


ASSEMBLY INSTRUCTIONS


NATAL ALU SOFA

COMPONENTS STAND-ALONE NATAL ALU SOFA


Frames:




1 - seater

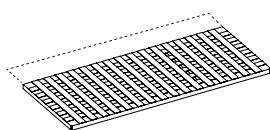

2 - seater
Regular / Deep

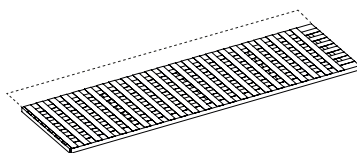

3 - seater
Regular / Deep




Meridienne
Left / Right


Backrests:




1 - seater



2 - seater

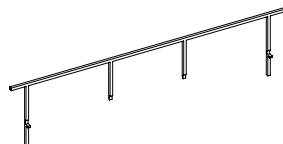

3 - seater



Meridienne



Meridienne connection

Armrests:




1 / 2 / 3 - seater
Regular / Deep



Meridienne
Left / Right

Frame support:




3 - seater leg




Meridienne leg


COMPONENTS TO CONNECT NATAL ALU SOFA MODULES

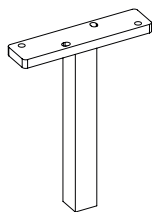


CONNECTION
LEG




CONNECTION
PLATE




CONNECTION
BACKREST

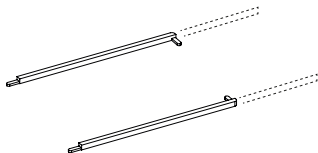

CONNECTION CORNER
Regular / Deep



PLUG




DOUBLE PLUG


HARDWARE:



SMALL
COUNTERSUNK SCREW




LARGE
COUNTERSUNK SCREW



SMALL
FLATHEAD SCREW




MEDIUM
FLATHEAD SCREW




LARGE
FLATHEAD SCREW

ASSEMBLY INSTRUCTIONS

- 1** Place the BACKREST against the backside of the frame and use the LARGE COUNTERSUNK SCREWS to secure it.

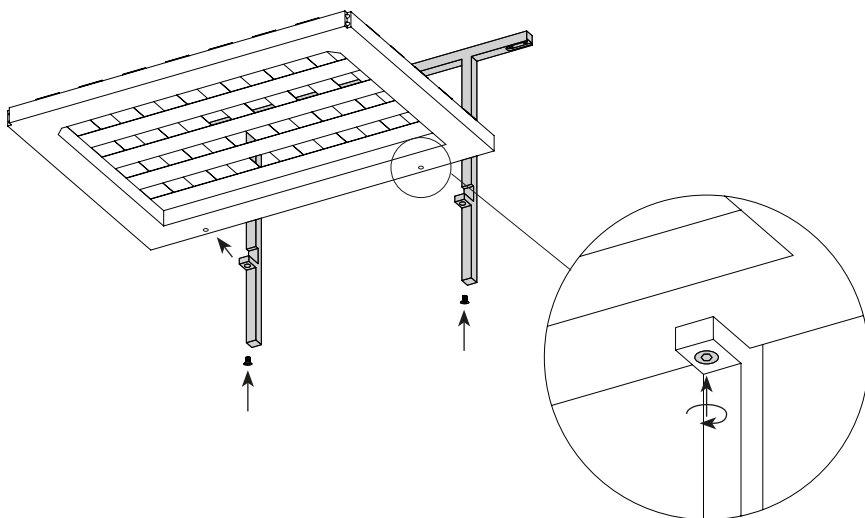


- 2** If you have a 2/3 - seater use the MEDIUM FLATHEAD SCREWS to secure the middle of the backrest to the frame. If you have a 1-seater proceed to step **20**

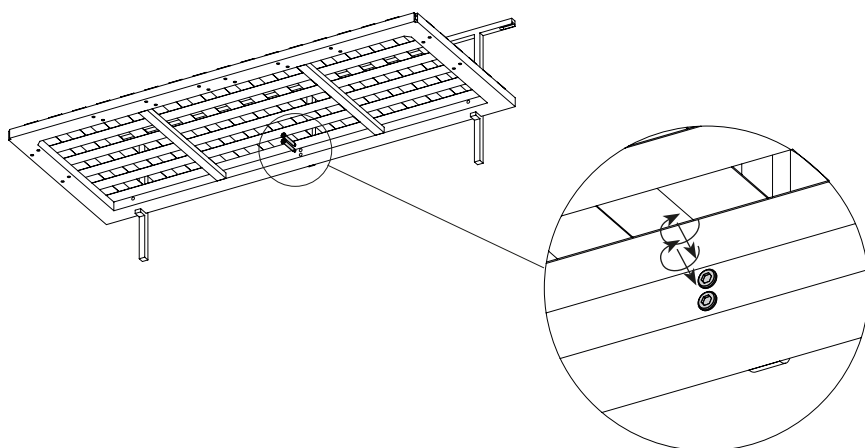

3

If you have a 3-seater, attach the 3 - SEATER LEG underneath the frame. Make sure the 3 - SEATER LEG is positioned in the center of the frame. Use 2 SMALL FLATHEAD SCREWS to secure the 3 - SEATER LEG to the frame. If you have a 2-seater proceed to step **20**

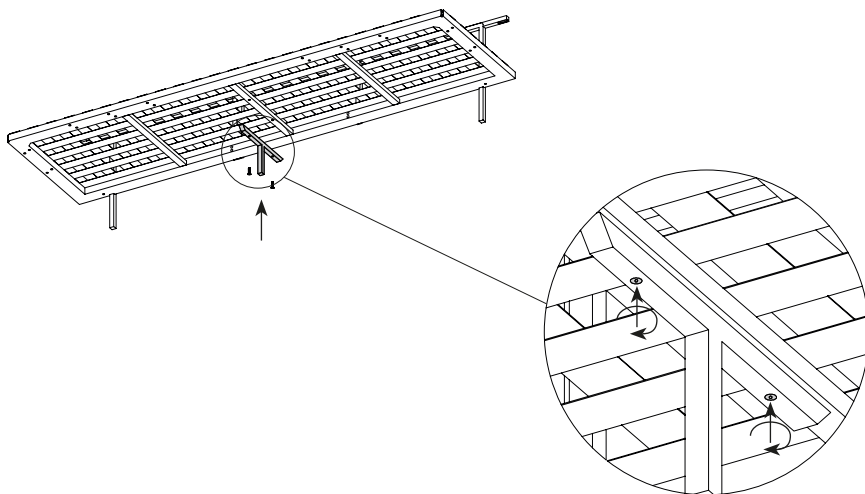


4

If you have a stand alone 1/2/3 - seater or meridienne, proceed to following steps.


1 - seater




2 - seater

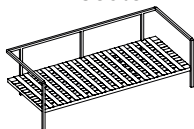


3 - seater

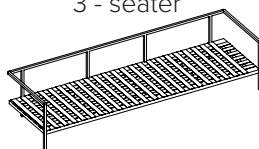**20****22**

meridienne

**23****26****5**

If you have a combination of different modules, study your setup thoroughly and follow the steps to build your setup properly.

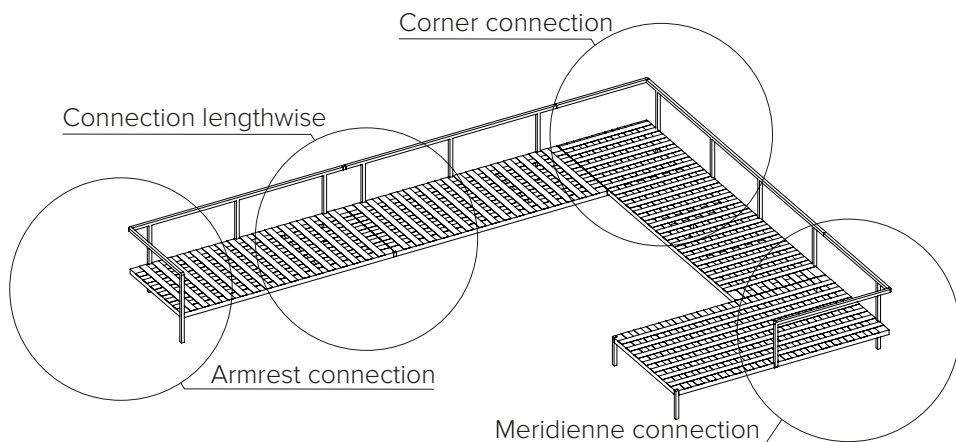

Connection lengthwise

6**8**

Corner connection

9**13**

Meridienne connection


14**19**

Armrest connection


20**22**

6

Place the DOUBLE PLUG in the designated cavity (A). Secure the CONNECTION PLATE and the CONNECTION LEG to the frame with 2 SMALL FLATHEAD SCREWS each(B).

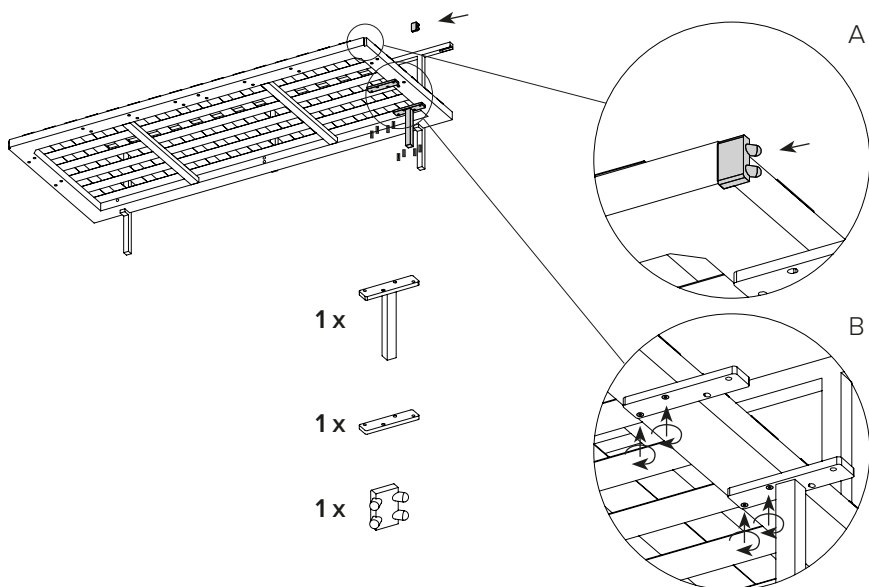
**7**

Take the second FRAME and slide it against the first FRAME. Secure the frames to each other using 4 SMALL FLATHEAD SCREWS.

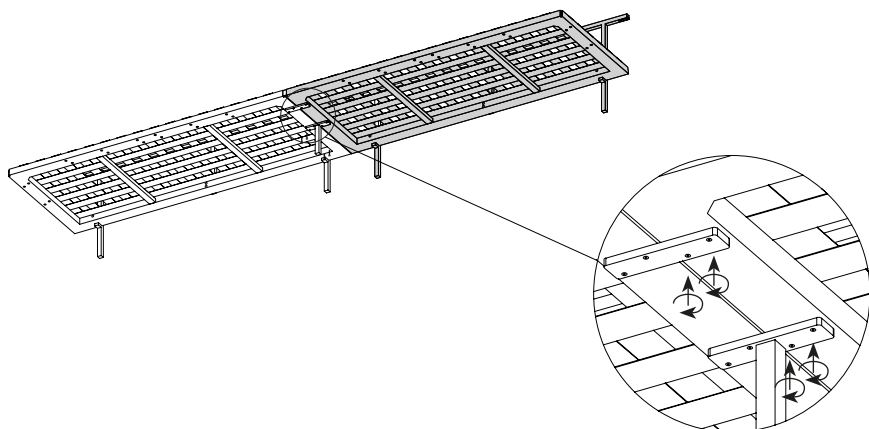


8

To secure the BACKRESTS together, place a CONNECTION BACKREST in between 2 BACKRESTS and secure it using 4 SMALL COUNTERSUNK SCREWS. To attach cushions proceed to step **26**

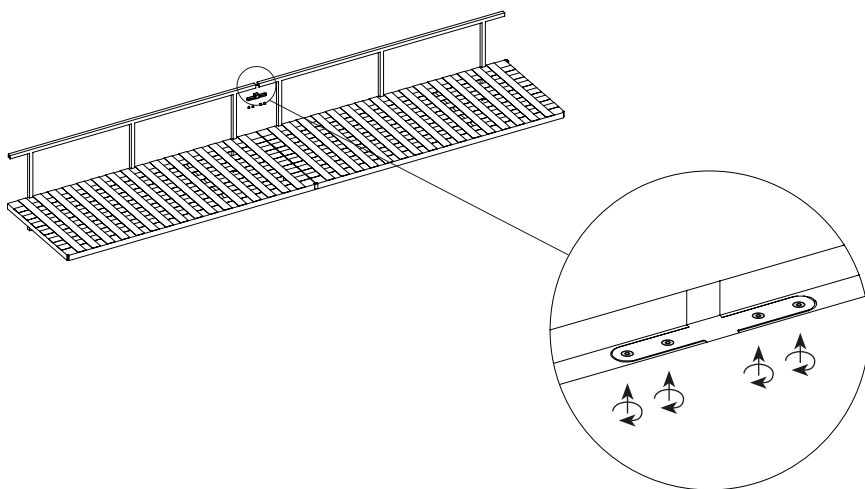
**9**

Before assembling a corner make sure a PLUG is placed in the designated hole.

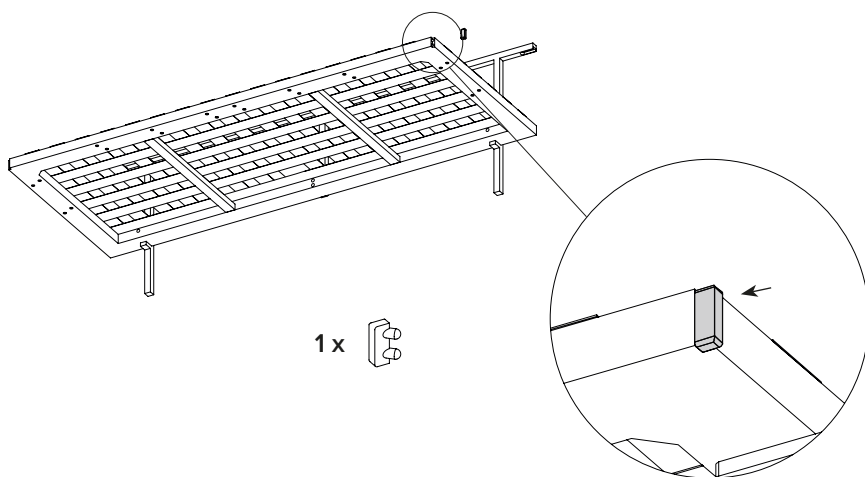


10

Secure the CONNECTION PLATE and the CONNECTION LEG to the frame with 2 SMALL FLATHEAD SCREWS each.

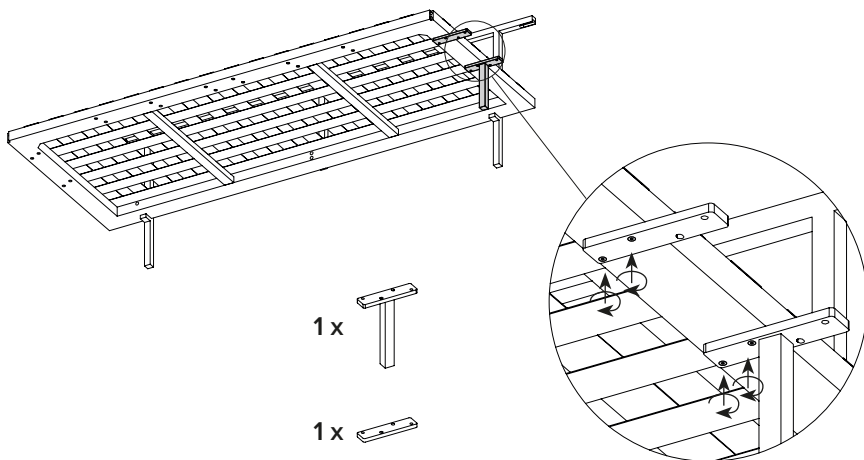
**11**

Secure the CORNER CONNECTION (regular / deep depending of the frame) to the BACKREST by using 2 SMALL COUNTERSUNK SCREWS.

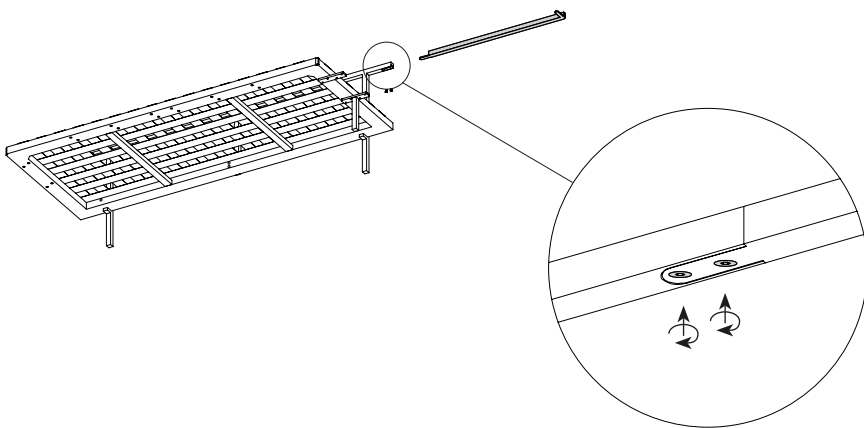


12

Take the second FRAME and slide it against the first FRAME. Put a PLUG in the designated hole (A). Secure the frames to each by using 4 SMALL FLATHEAD SCREWS (B).

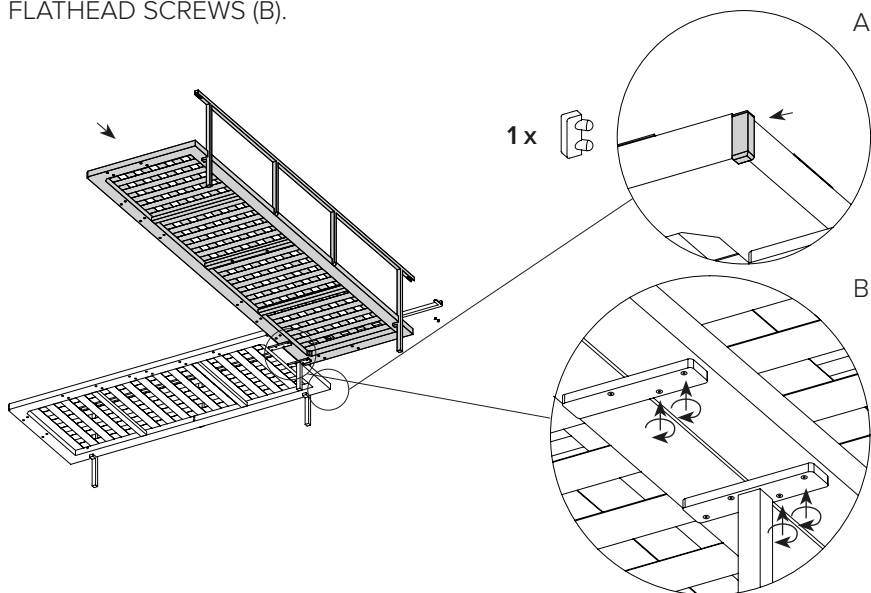
**13**

Attach the BACKREST of the second frame to the CORNER CONNECTION by using 2 SMALL COUNTERSUNK SCREWS. To attach cushions proceed to step **26**

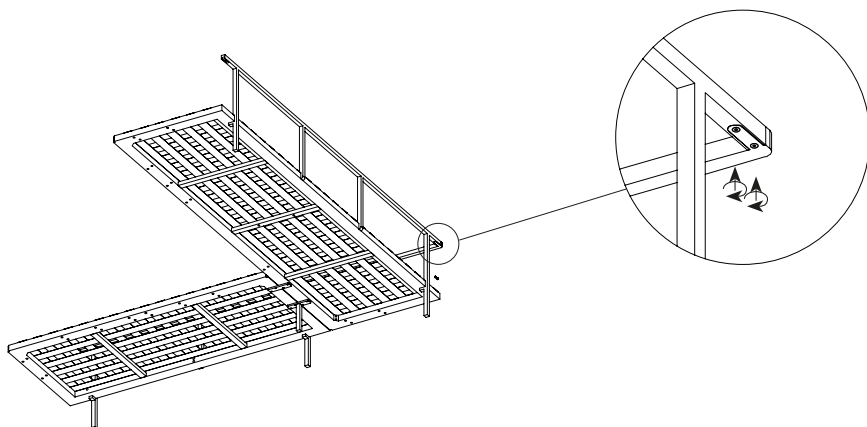


14

Secure the CONNECTION PLATE and the CONNECTION LEG to the frame with 2 SMALL FLATHEAD SCREWS each.

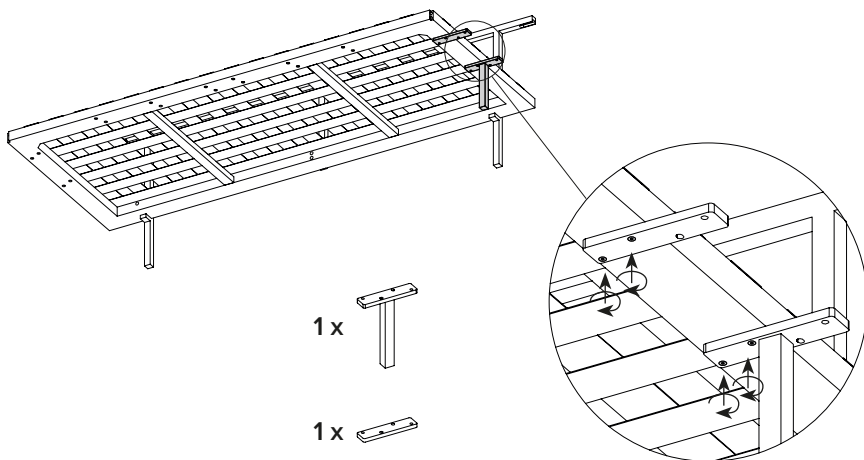
**15**

Before assembling a corner make sure a PLUG is placed in the designated hole.

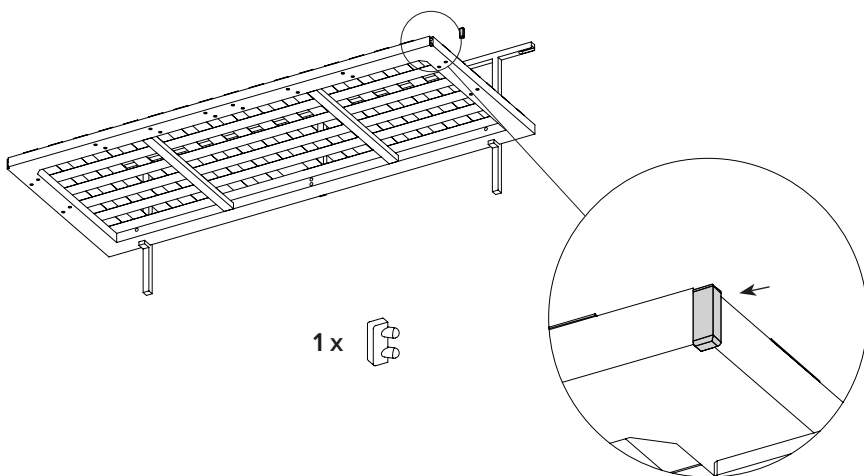


16

Use 1 SMALL COUNTERSUNK SCREWS to secure the MERIDIENNE BACKREST to the MERIDIENNE FRAME.

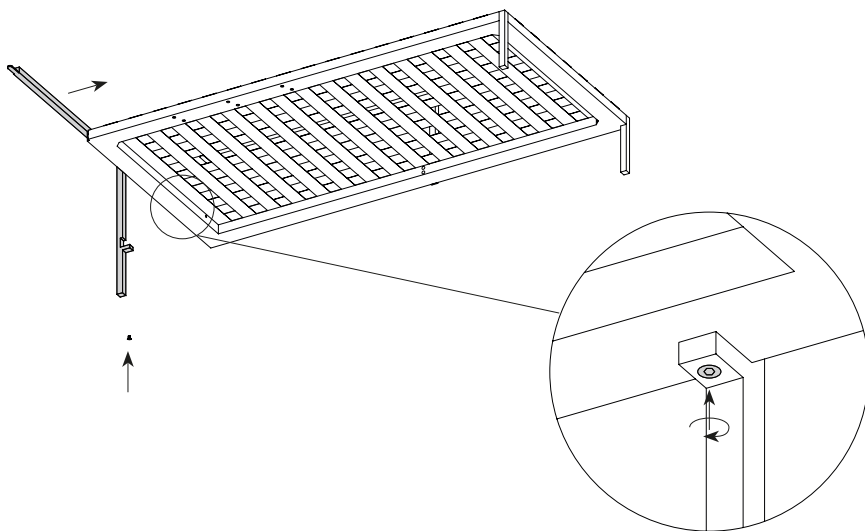
**17**

To attach the MERIDIENNE ARMREST to the frame use 2 MEDIUM FLATHEAD SCREWS (A). Use 2 SMALL COUNTERSUNK SCREWS to secure the ARMREST to the BACKREST (B).

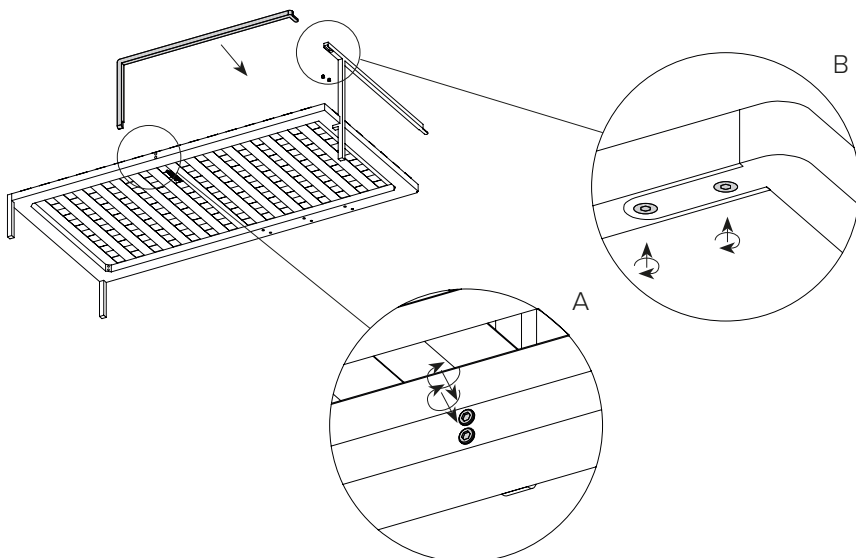


18


Take the MERIDIENNE FRAME and slide it against the first FRAME. Secure the frames to each other using 4 SMALL FLATHEAD SCREWS.

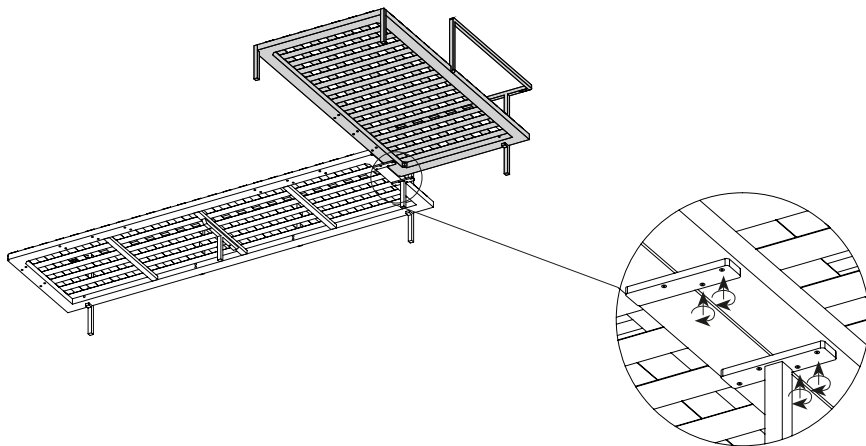**19**


To secure the BACKRESTS to each other use 2 SMALL COUNTERSUNK SCREWS. To attach cushions proceed to step **26**

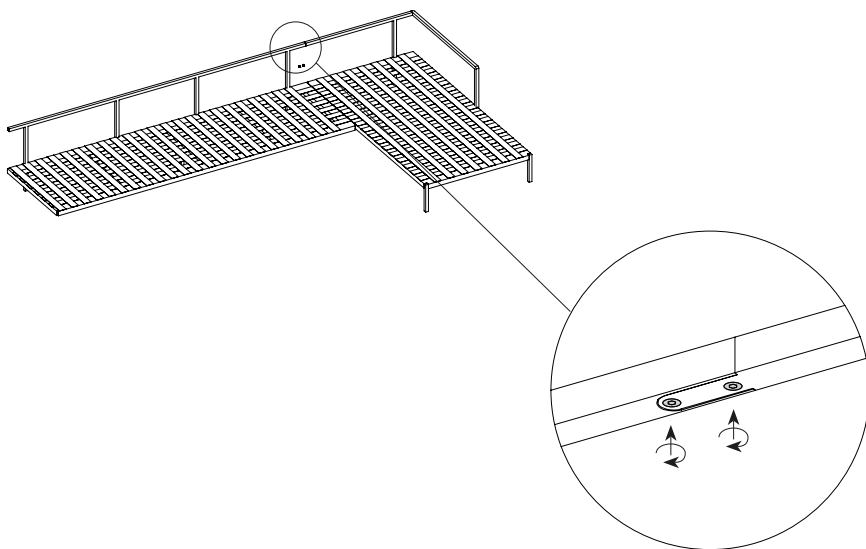


- 20** Place one ARMREST (regular / deep, depending of the frame) on each side of the frame.

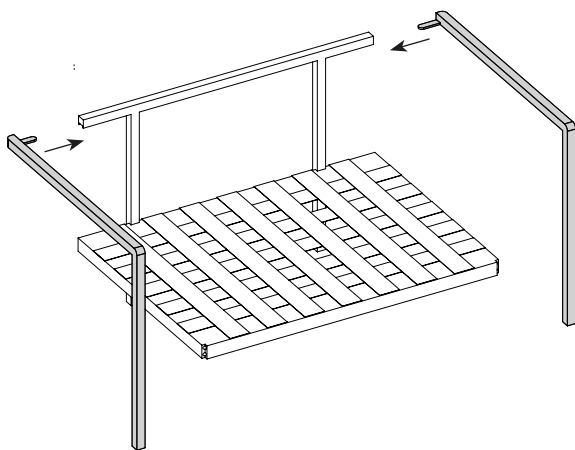


- 21** To secure the ARMRESTS to the FRAME use 2 LARGE FLATHEAD SCREWS for each arm.

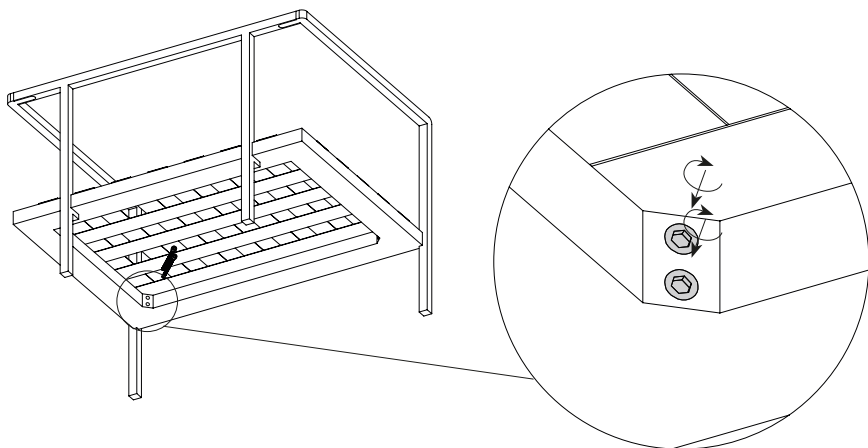

- 22** Use 2 SMALL COUNTERSUNK SCREWS to secure each ARMREST to the BACKREST. To attach cushions proceed to step **26**

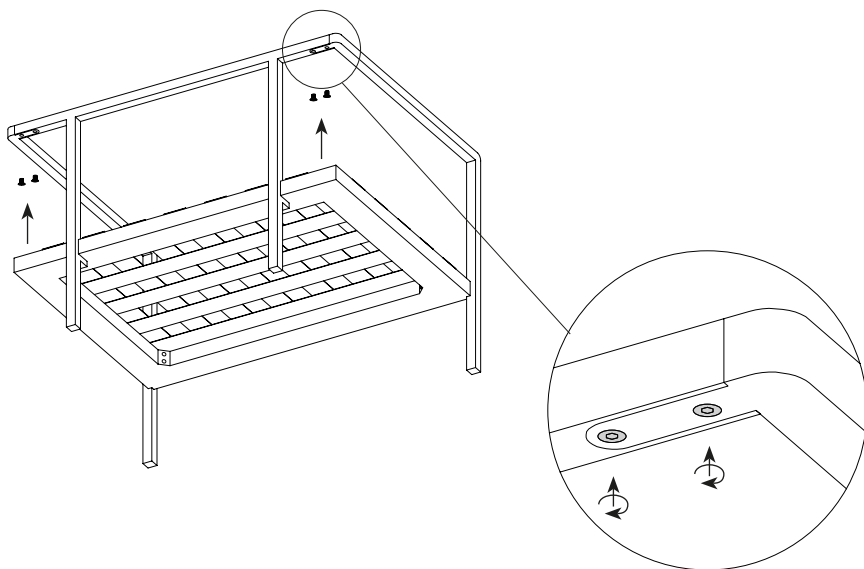


- 23** To attach the MERIDIENNE LEGS to the MERIDIENNE FRAME use 2 LARGE FLATHEAD SCREWS per leg.

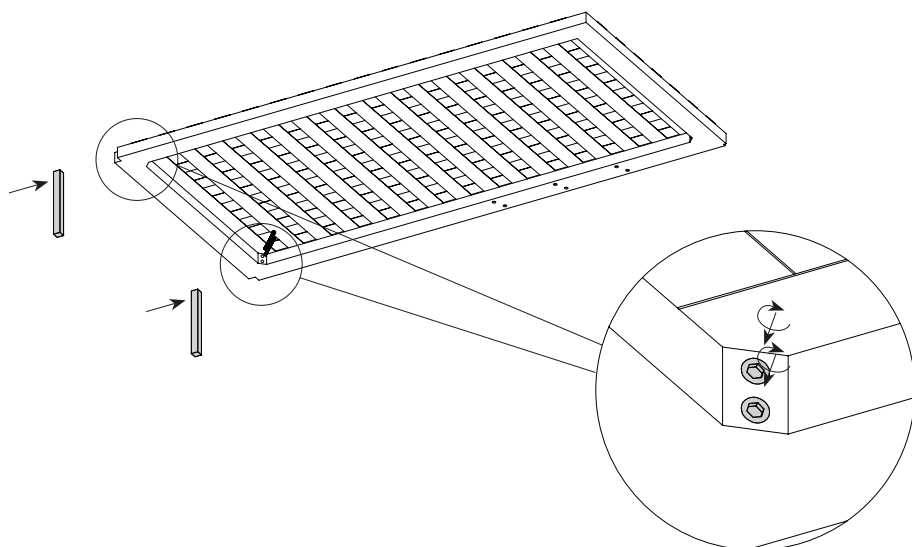


24

Use 1 SMALL COUNTERSUNK SCREW (A) to secure the MERIDIENNE BACKREST to the MERIDIENNE FRAME and 2 LARGE FLATHEAD SCREWS (B).

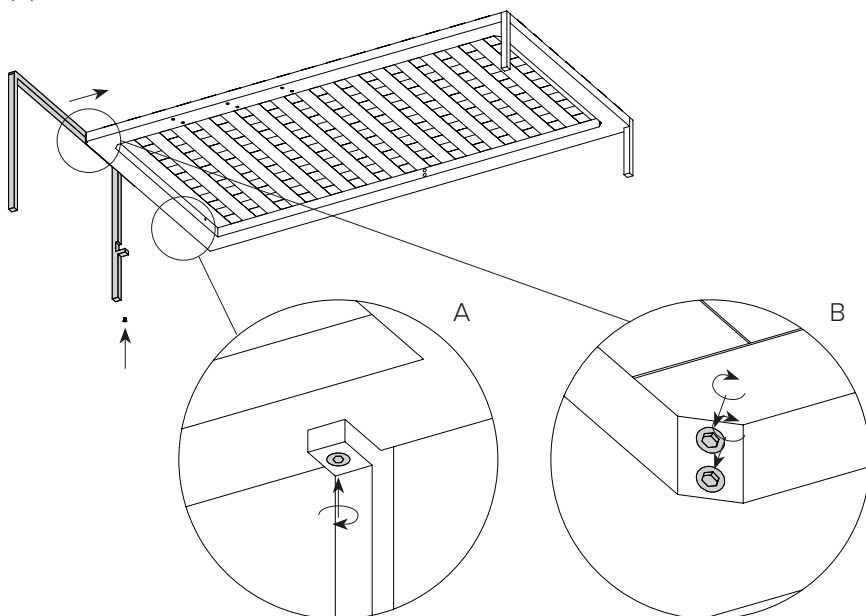
**25**

To attach the MERIDIENNE ARMREST to the frame use 2 MEDIUM FLATHEAD SCREWS (A). Use 2 SMALL COUNTERSUNK SCREWS to attach the MERIDIENNE ARMREST to the BACKREST (B).

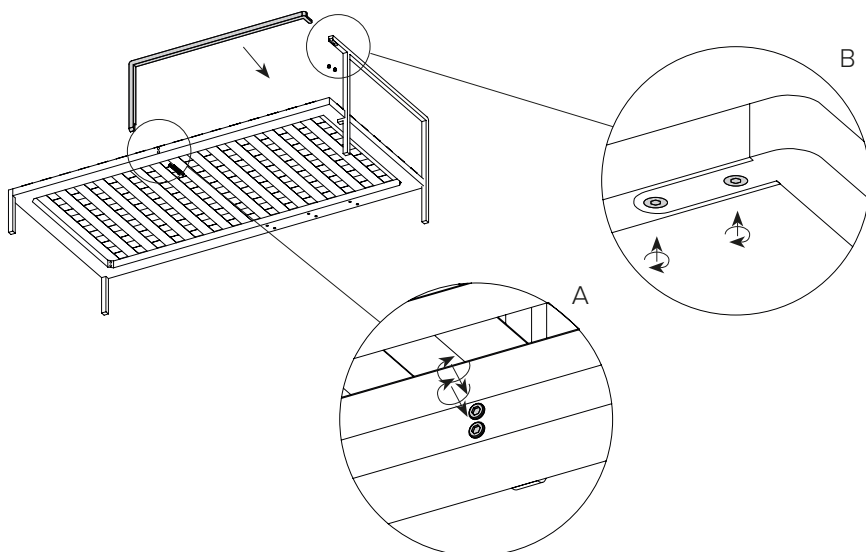


26


To attach the armrest cushions to the seat cushion use the zippers (A). To secure the backrest cushion to the seat cushion use the buttons (B).

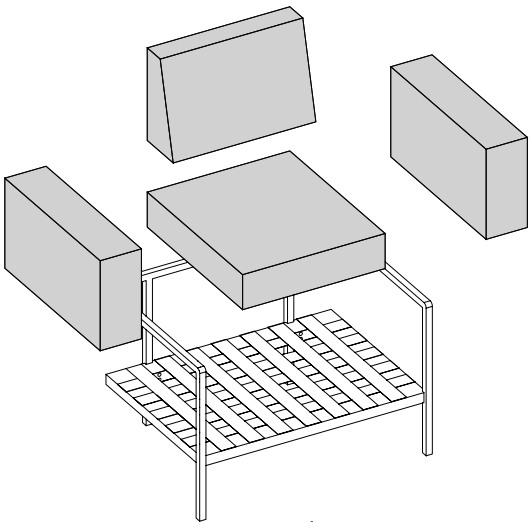


A

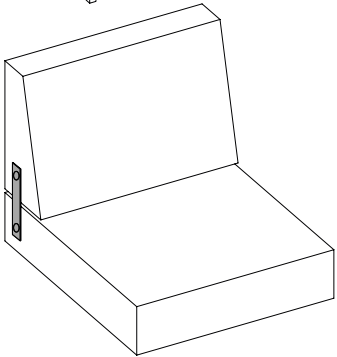

B

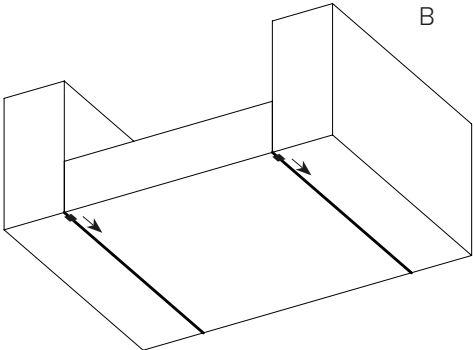

- 26** To mount the backrest cushion to the backrest wrap the velcro straps around the backrest (A).

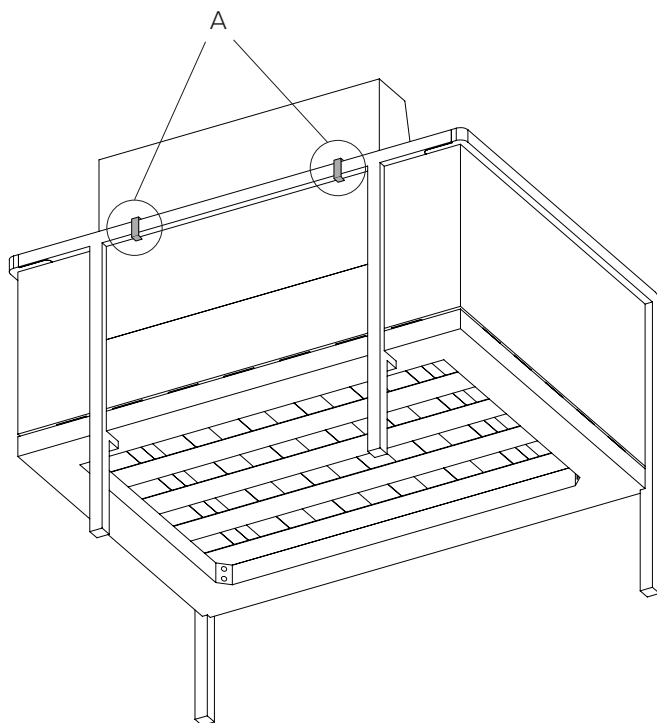

Tribù nv
Oude Heidestraat 72
3740 Bilzen
BELGIUM

www.tribu.com
info@tribu.com