



**ASSEMBLY INSTRUCTIONS**


**NODI SOFA**

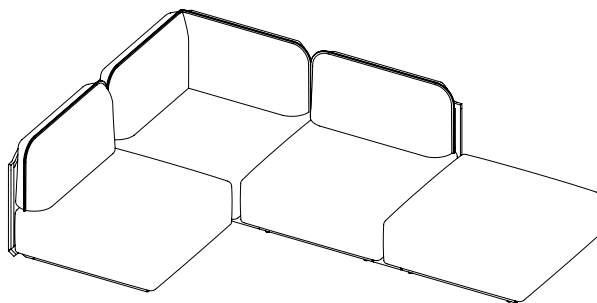


COMPONENTS




Regular  
BASE

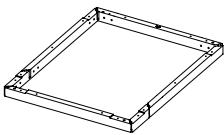


Deep  
BASE

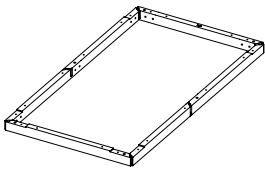


Lounge  
BASE




Regular  
PLATE

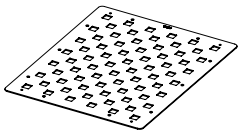


Deep  
PLATE

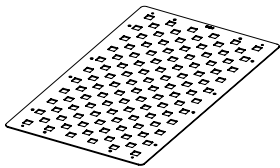


Lounge  
PLATE

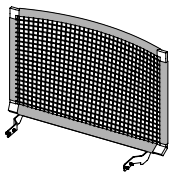


Extension  
BACKREST

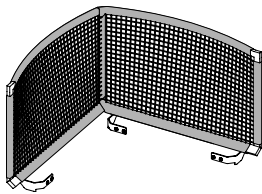


Corner  
BACKREST



front  
CONNECTOR




inner corner  
CONNECTOR




rear  
CONNECTOR

## HARDWARE




CORNER INSERT




RIGHT INSERT




LEFT INSERT




COUNTERSUNK SCREW



FLAT HEAD SCREW



PLASTIC WASHER




PLASTIC BUSHING






## ASSEMBLY INSTRUCTIONS

- 1** Determine if you have freestanding Nodi sofa modules or a Nodi sofa set.

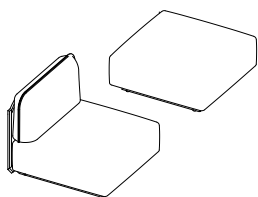

### FREESTANDING

continue with step **2**

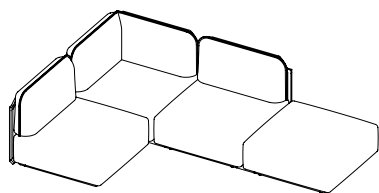


### SET


continue with step **10**

## ASSEMBLY INSTRUCTIONS

- 2** Layout the BASE at it's final location. The logo marks the back of the BASE.

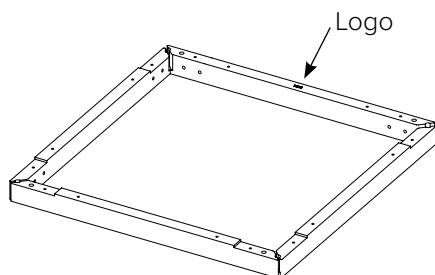


- 3** Every Nodi sofa BASE has adjustable gliders to adapt to uneven floors. Use a level to make sure the BASE is level. The gliders can accommodate up to 20 mm height difference.

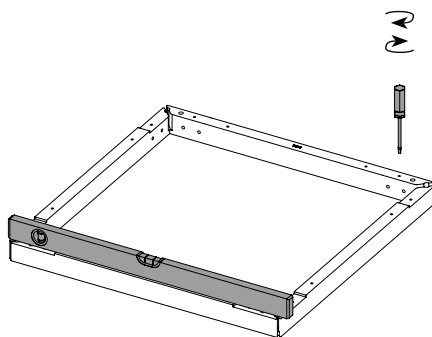


**4**

Lay out the backrest to match your frame.




Extension  
BACKREST

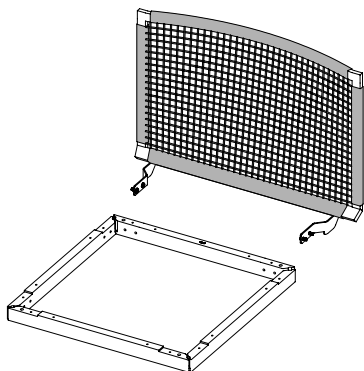

Corner  
BACKREST

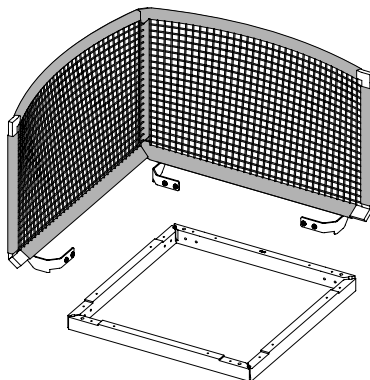**5**

Use FLAT HEAD SCREW, PLASTIC WASHER and PLASTIC BUSHING to attach the BACKREST to the BASE. 4 x for Extension BACKREST, 6 x for corner BACKREST.

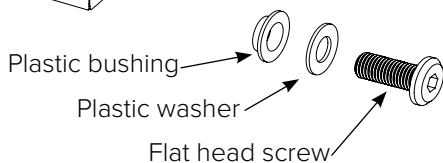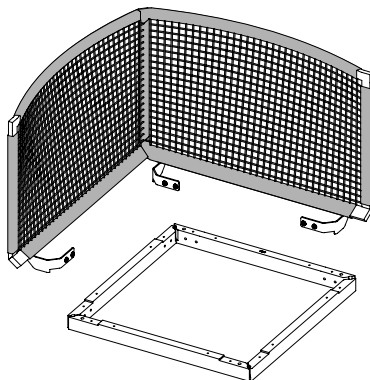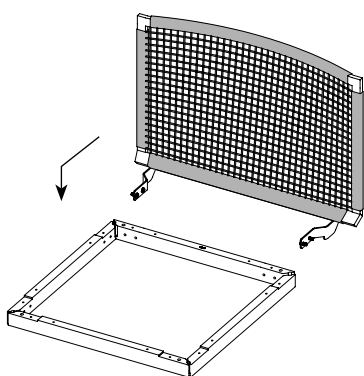


Plastic bushing

Plastic washer


Flat head screw

**7**

When the backrest is assembled it is time to install the INSERTS. It depends on your module (regular, deep, lounger) which INSERTS you need.


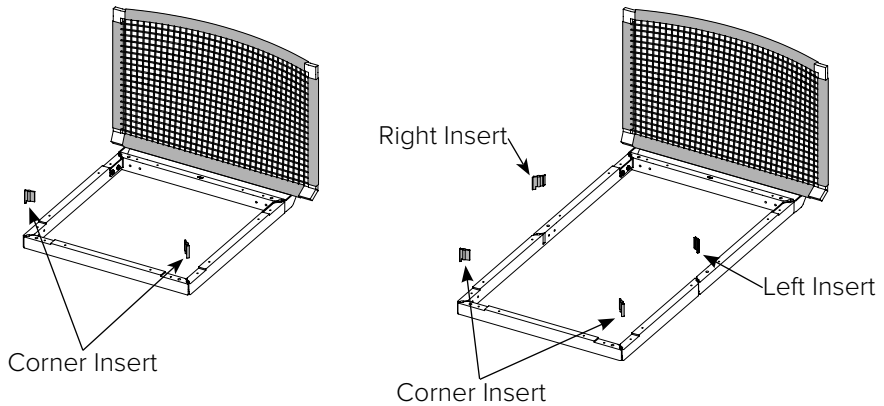
**8**

Add the plate, make sure the PLATE matches with the BASE. Each PLATE has a logo, match it with the logo on the BASE. Use COUNTERSUNK SCREWS to attach the plate to the BASE.

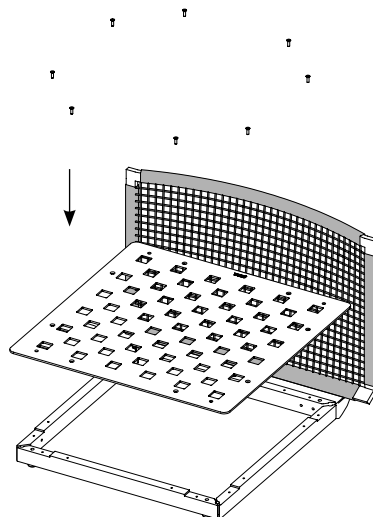


9


Every seat cushion has a Tribù logo, make sure the logo is in the rear, on the right. Make sure the triangular fabric gather is pointing towards the backrest.

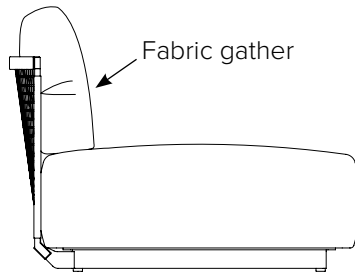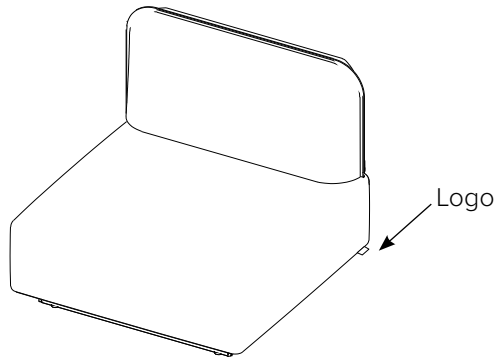

- 10** Layout the BASES at their final location. The logo marks the back of the BASE, make sure it's pointing outwards. You can use a REAR CONNECTOR to make sure the distance in between the BASES is correct.

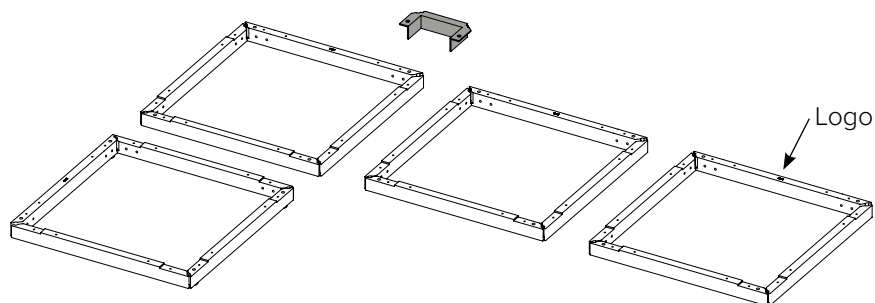


- 11** Connect the BASES to each other with the FRONT CONNECTORS. Start with the FRONT CONNECTOR, this connector connects base at the front lengthwise. Hand tighten 4 x FLAT HEAD SCREW and 4 x PLASTIC WASHER. Make sure the BASES and CONNECTORS are flush.

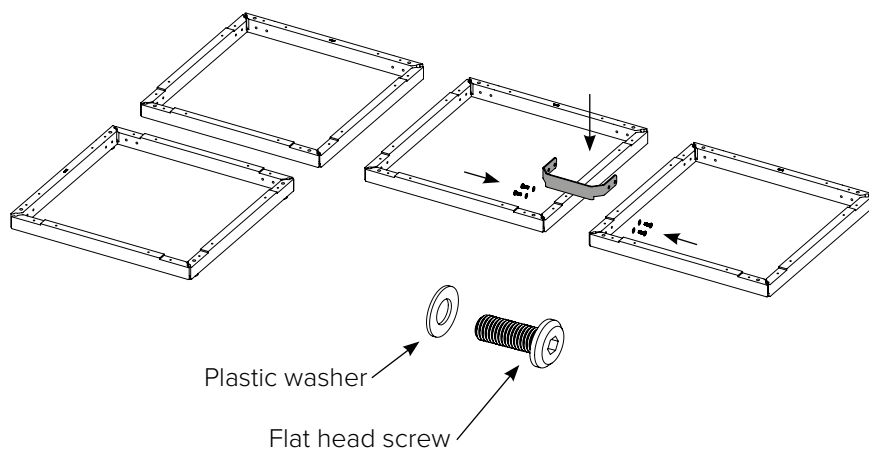


**12**

If your Nodi sofa set has a corner you'll have to use an **INNER CORNER CONNECTOR** to connect 3 **BASES** to each other.

Hand tighten 6 x **FLAT HEAD SCREW** and 6 x **PLASTIC WASHER**. Make sure the **BASES** and **CONNECTORS** are flush.

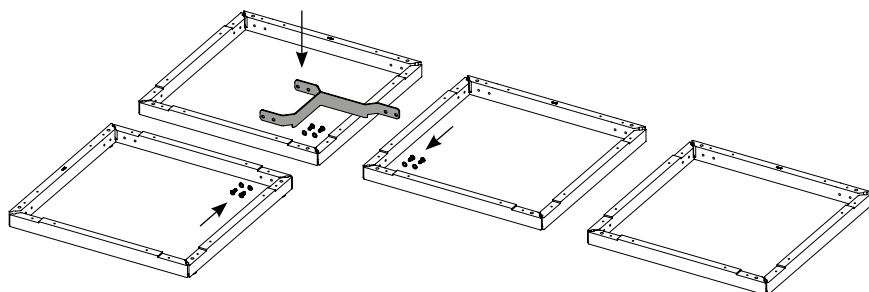
**13**

Finally install the **REAR CONNECTOR**. Hand tighten 2 x **COUNTERSUNK SCREW**. Make sure the **BASES** and **CONNECTORS** are flush.

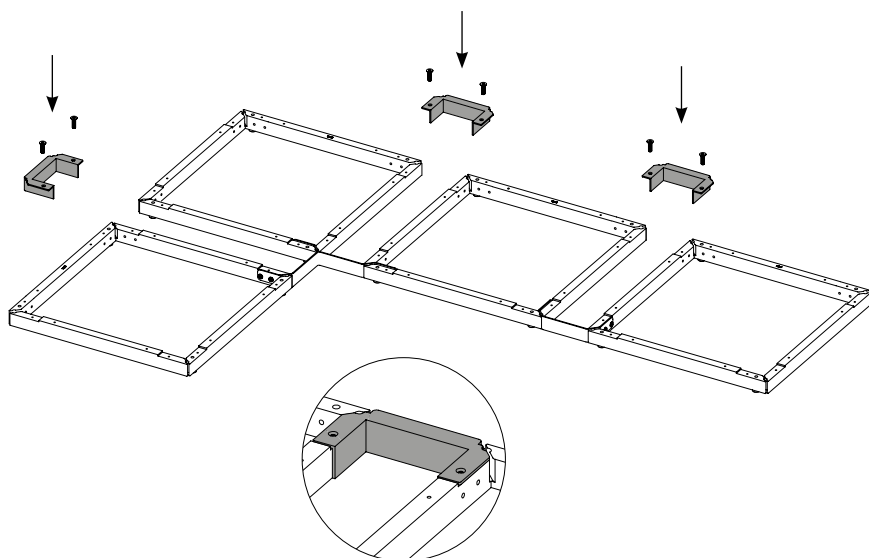


**14**

Every Nodi sofa BASE has adjustable gliders to oppose uneven floors. Use a level to make sure the BASES are level to each other and horizontal. Start with the BASE in the corner.

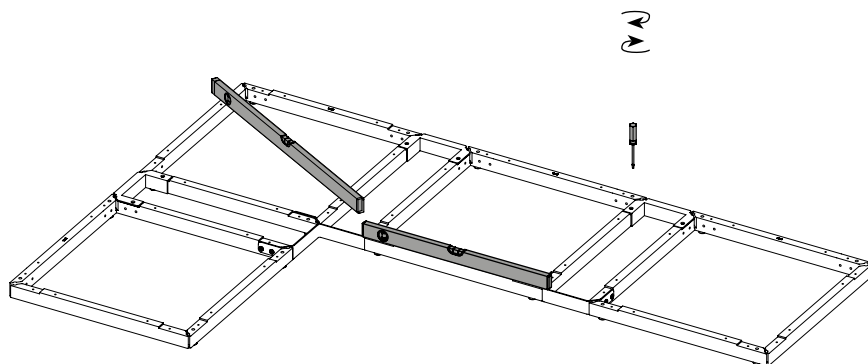**15**


Now fully tighten all connector SCREWS.

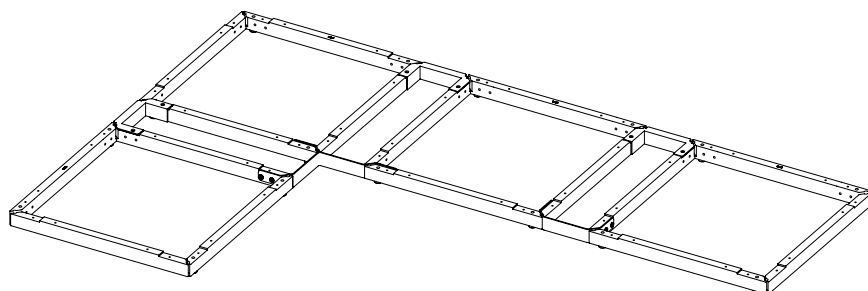





**16**

Lay out the backrests so they match your Nodi sofa set.

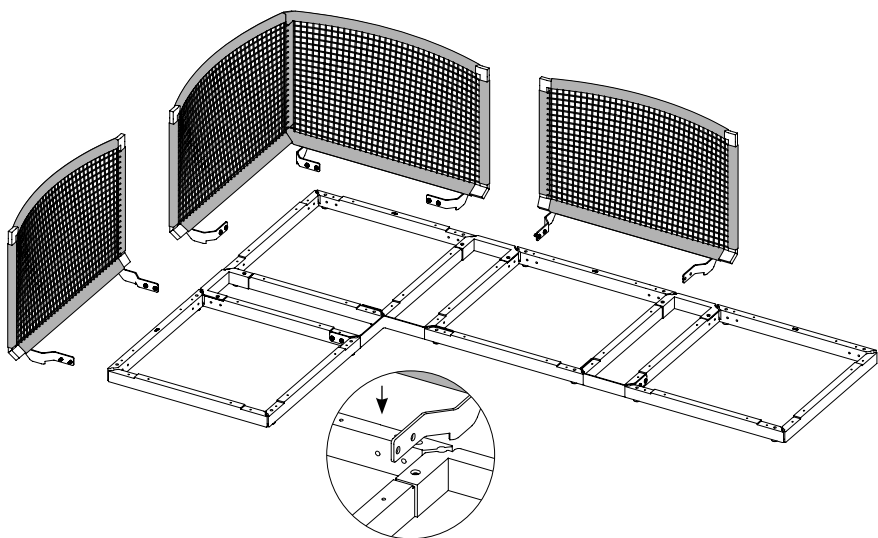
**17**

Hand tighten 4/6 x FLAT HEAD SCREW, 4/6 x PLASTIC WASHER, 4/6 x PLASTIC BUSHING to attach the backrest to the BASE. Start with the corner BACKREST.

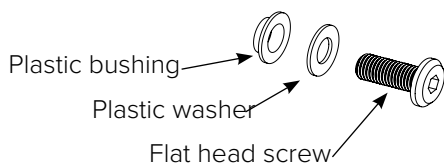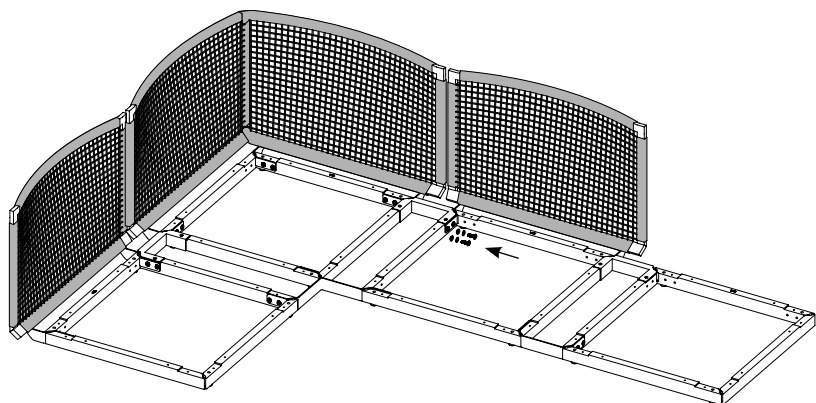


**18**

Make sure the backrests are aligned with each other, the non woven part of the backrests should be flush with each other. If that's the case, tighten the screws 100 %. You can adjust by the tilting the backrest before full tightening.

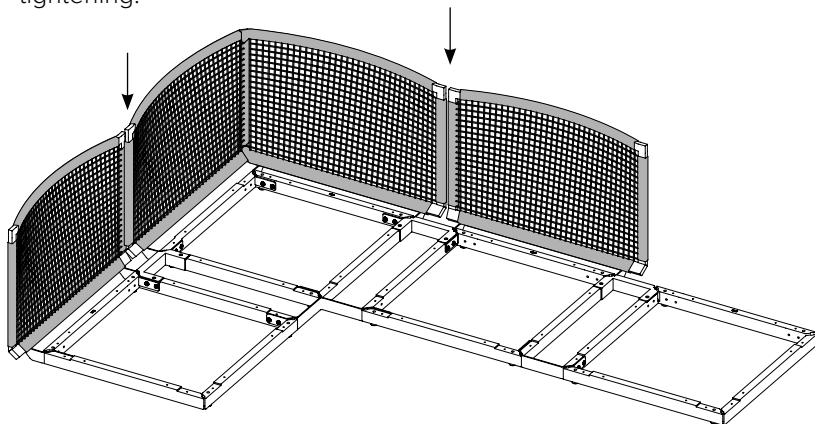**19**

When all connectors and backrest are installed, install the INSERTS. Regular bases will only have exposed corners, which can be filled with CORNER INSERTS. Lounge or deep bases will also need INSERT Left and INSERT RIGHT (step **7**)

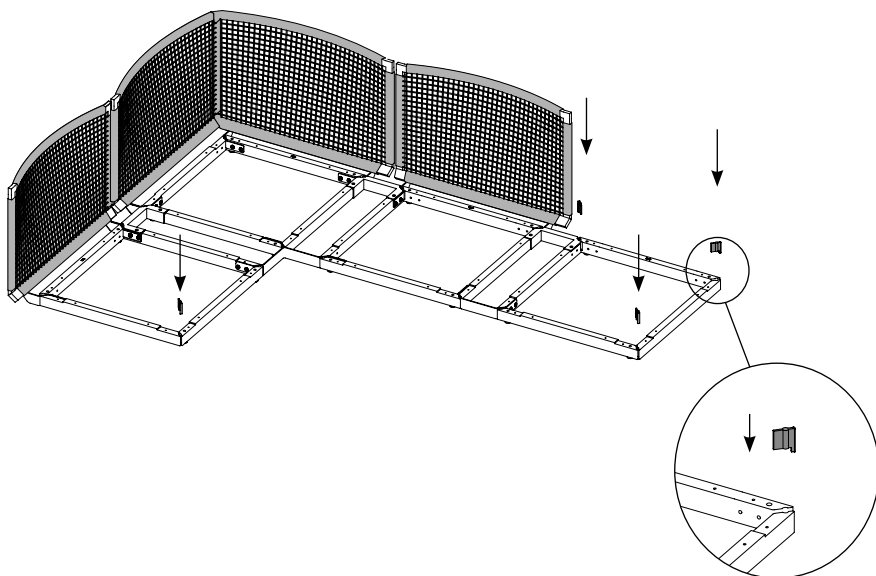


**20**

Add the plates, make sure the PLATE matches the BASE.  
Each PLATE has a logo, match it with the logo on the BASE.  
Use COUNTERSUNK SCREWS to attach the plate to the BASE.


Regular plate: 8 x COUNTERSUNK SCREW

Deep plate: 8 x COUNTERSUNK SCREW

Lounge plate: 8 x COUNTERSUNK SCREW

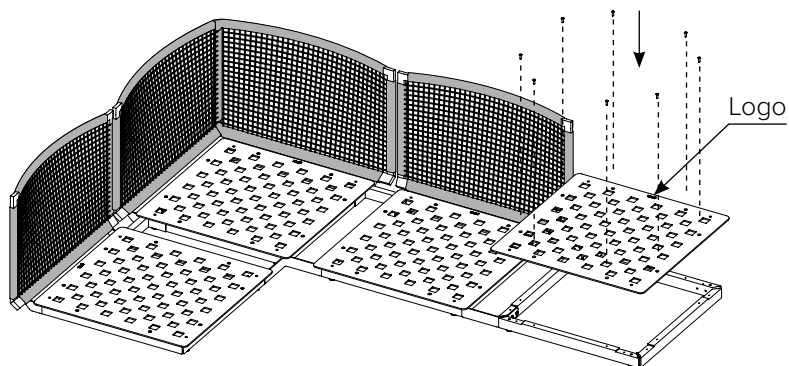**21**

After installing the cushions, you can enjoy your Nodi sofa.

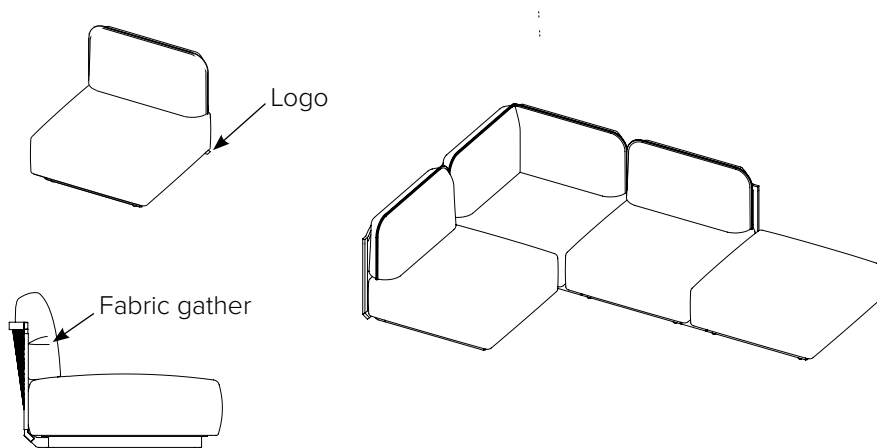

Tribù nv  
Oude Heidestraat 72  
3740 Bilzen  
BELGIUM

[www.tribu.com](http://www.tribu.com)  
[info@tribu.com](mailto:info@tribu.com)